

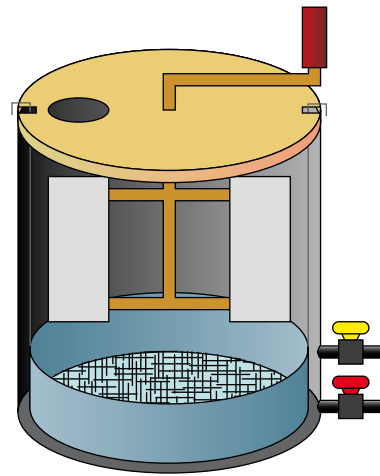



The STUN Reactor

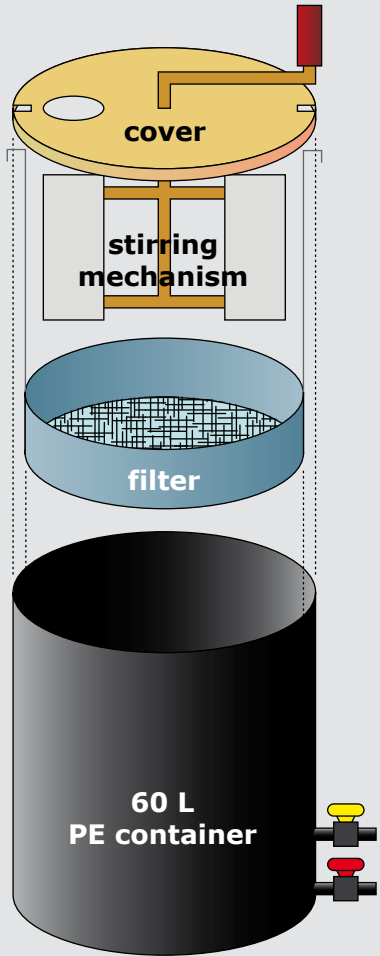


0 empty reactor

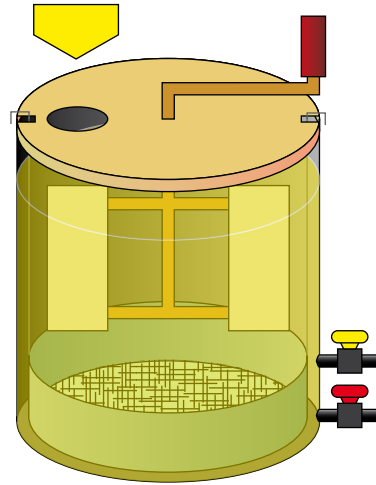


1 fill with urine

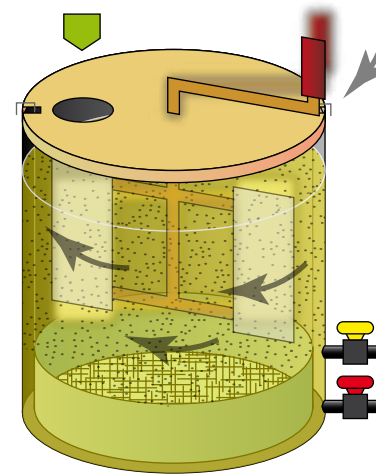


2 add magnesium and stir
> struvite precipitates

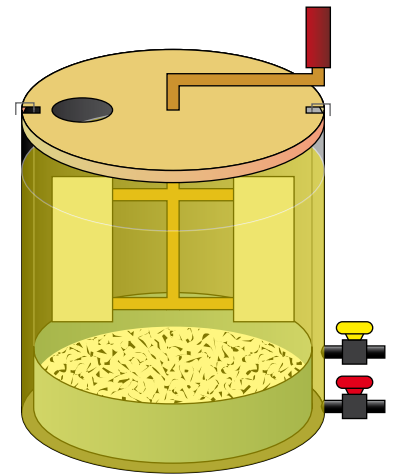


3 struvite settles

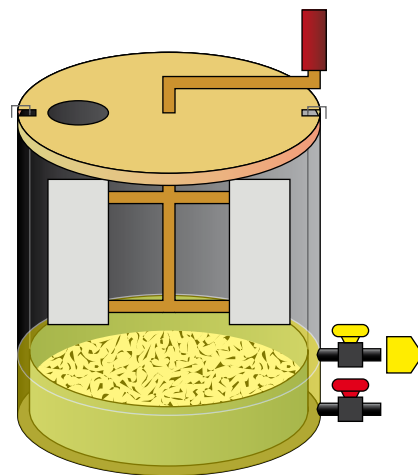


4 open upper outlet
> urine decantates

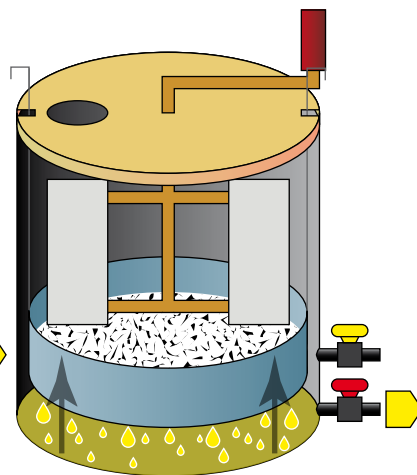

5 lift filter partly
> remaining urine drains

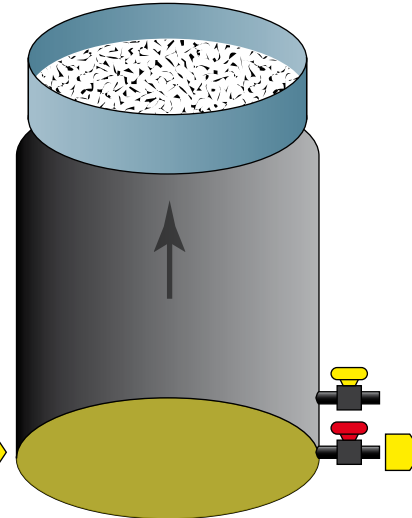

6 remove filter

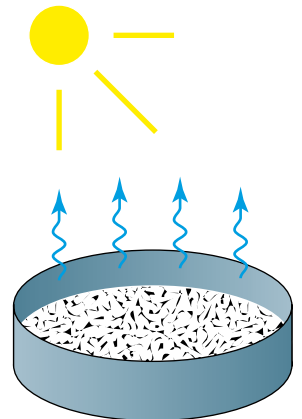

7 sundry struvite